

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

Overview



The Siemens SITRANS LUT400 series controllers are compact, single point, long-range ultrasonic controllers for continuous level or volume measurement of liquids, slurries, and solids, and high accuracy monitoring of open channel flow.

Benefits

- Small 1/2 DIN enclosure [144 h x 144 d x 146 w mm (5.7 x 5.7 x 5.75 inch)] with standard universal mounting bracket for wall, pipe, and DIN rail, plus an optional panel mount
- Easy to use LUI display with local four-button programming, menu-driven parameters, and Wizard support for key applications
- Level, Volume, OCM Flow monitoring
- Three relays combined with a suite of pump, alarm, and relay control features
- HART Communications
- EDDs for SIMATIC PDM, AMS Device Manager, and Field Communicator 375/475, plus DTMs for FDTs (Field Device Tools)
- Web browser for local programming from an intuitive web-based interface
- Two discrete inputs for backup level override and pump interlock functions
- Echo profile and trend views from the local display
- Patented digital receiver for improved performance in electrically noisy applications (close proximity to VSDs)
- Real time clock with daylight savings time, supporting an integrated datalogger and energy saving algorithms for minimizing pump operation during high cost energy periods
- Removable terminal blocks for ease of wiring

Application

The SITRANS LUT400 comes in three different models, depending on the application, level of performance and functionality required:

- SITRANS LUT420 Level Controller: Level or volume measurement of liquids, slurries, and solids, as well as basic pump control functions, and basic data logging capability
- SITRANS LUT430 Level, Pump and Flow Controller: Includes all features of the LUT420 plus a full suite of advanced pump control and alarm functionality, open channel flow monitoring, and basic flow data logging capability
- SITRANS LUT440 High Accuracy OCM: Our most featured, highest accuracy model. Includes all features of the LUT430, plus the industry's best accuracy (± 1 mm within 3 m), full suite of advanced control functionality, and enhanced flow logging capability
- Key applications: wet wells, reservoirs, flumes/weirs, chemical storage, liquid storage, hoppers, crusher bins, dry solids storage

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

4

Technical specifications

Mode of Operation	Ultrasonic level, volume, pump, and open channel flow
Measuring principle	
Measuring range	0.3 ... 60 m (1 ... 196 ft), transducer dependent
Input	
Discrete	0 ... 50 V DC switching level Logical 0 ≤ 10 V DC Logical 1 = 10 ... 50 V DC Max. 3 mA
Output	
Transducer frequency	10 ... 52 kHz
Ultrasonic transducer	Compatible transducers: All EchoMax and ST-H series trans- ducers
Relays	1 SPDT Form C, NO or NC relay, rated 1A at 250 V AC, non-inductive and 3A at 30 V DC 2 SPST Form A, NO relays, rated 5A at 250 V AC, non-inductive and 3 A at 30 V DC
mA output	4 ... 20 mA, isolated
• Max. load	600 Ω max. in ACTIVE mode, 750 Ω max. in PASSIVE mode
• Resolution	0.1 % of range
Accuracy	
Error in measurement	- Standard operation: ± 1 mm (0.04 inch) plus 0.17 % of measured distance - High accuracy OCM: ± 1 mm (0.04 inch), within 3 m (9.84 ft) range
Resolution	- Standard operation: 0.1 % of range or 2 mm (0.08 inch), whichever is greater - High accuracy OCM: 0.6 mm (0.02 inch), within 3 m (9.84 ft) range
Temperature compensation	-40 ... +150 °C (-40 ... +300 °F) - Integral temperature sensor in transducer - External TS-3 temperature sensor (optional) - Programmable fixed temperature values
Rated operating conditions	
Installation conditions	
• Location	Indoor/outdoor
• Installation category	II
• Pollution degree	4
Ambient conditions	
• Ambient temperature (enclosure)	-20 ... +50 °C (-4 ... +122 °F)

Design

Weight

- Enclosure with display lid
- Enclosure with blank lid

1.3 kg (2.87 lb)

1.2 kg (2.65 lb)

Material (enclosure)

Polycarbonate

Degree of protection

- Enclosure with display or blank lid
- Enclosure with blank lid and knock-out removed

IP65/Type 4X/NEMA 4X
IP20

Remote display lid

IP65/Type 3/NEMA 3

Cable

Transducer and mA output signal

- Transducer, mA output: 2 copper conductors, twisted, with foil shield/drain wire, 300 V 0.5 ... 0.75 mm² (22 ... 18 AWG)
- Relay/power to be copper conductors per local requirements to meet 250 V 5 A contact rating

Max. separation between transducer and transceiver

365 m (1 200 ft)

Displays and controls

60 x 40 mm (2.36 x 1.57 inch) removeable LCD, 240 x 160 pixels resolution, operational up to 5 m from enclosure base

Programming

- Primary
- Secondary

- 4 Local push buttons
- PC running SIMATIC PDM
- PC running Emerson AMS Device Manager
- PC running a web browser
- PC running a Field Device Tool (FDT)
- Field Communicator 375/475 (FC375/FC475)

Memory

- 512 kB flash EPROM
- 1.5 MByte flash for data logging

Power supply

AC version

100 ... 230 V AC ± 15 %, 50/60 Hz, 36 VA
Fuse: 5 x 20 mm, Slow Blow, 0.25 A, 250 V

DC version

10 ... 32 V DC, 10 W
Fuse: 5 x 20 mm, Slow Blow, 1.6 A, 125 V

Certificates and approvals

General

CSA_{US/C}, CE, FM, UL listed, C-TICK

Hazardous

- Non-incendive (Canada)

CSA Class I, Div. 2, Groups A, B, C, D; Class II, Div. 2, Groups F, G; Class III

Communication

HART 7.0, USB

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

4

		SITRANS LUT420	SITRANS LUT430	SITRANS LUT440
Category	Feature	Level Controller	Level, pump and flow controller	High accuracy OCM controller
Operations	Level, space, and distance measurement	✓	✓	✓
	Open channel flow measurement		✓	✓
	Volume conversion	✓	✓	✓
Specifications	Compatible with EchoMax and ST-H transducers	✓	✓	✓
	Standard accuracy: $\pm 1 \text{ mm} + 0.17 \%$ of measured distance	✓	✓	✓
	High accuracy: $\pm 1 \text{ mm}$ within 3 meters			✓
	Mounting options: wall or panel, pipe, DIN-rail	✓	✓	✓
Data logging and communications	HART communications	✓	✓	✓
	4 ... 20 mA output (active and passive)	✓	✓	✓
	Integrated datalogger for measurement value and alarms	✓	✓	✓
	Integrated datalogger for fixed rate flow logging		✓	✓
	Integrated datalogger for variable rate flow logging			✓
	Daily data logging for maximum, minimum and average flow, daily totalized volume, and minimum and maximum temperature			✓
Flow monitoring	High accuracy open channel flow measurement			✓
	9 digit daily and running flow totalizers		✓	✓
	High and low flowrate alarms		✓	✓
	External totalizer and sampler control		✓	✓
Pump control	Energy saving algorithms for pump control		✓	✓
	Wall cling reduction	✓	✓	✓
	Pump run-on functionality		✓	✓
	Pump start and power resumption delays		✓	✓
	Alternate duty pump routines	✓	✓	✓
	Fixed duty and service ratio pump routines		✓	✓
	Pumped volume totalizer		✓	✓
	Submergence detection	✓	✓	✓
	Discrete input pump interlocks		✓	✓
	Time to spill calculation			✓

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

Selection and Ordering data	Order No.
SITRANS LUT420 and LUT430 Compact ultrasonic level controllers for continuous short to long-range level or volume measurement of liquids, slurries, and solids. Both units include basic relay functions for pumps, alarms, and other controls, plus onboard data logging. LUT430 offers additional advanced pump control and alarm functionality, open channel flow monitoring, and basic flow data logging capability. Functionality varies by model.	7ML5050-
Model SITRANS LUT420 - Level controller SITRANS LUT430 - Level, Pump & Flow controller	A B
Enclosure display options With display With remote panel mount display No display (blank lid provided) Note: Enclosure includes back-plate for wall and pipe mounting, and an integrated clip for DIN-rail mounting. DIN-rail mounting for standard TS35 x 7.5 and TS35 x 15 mm DIN-rail to IEC 60715, EN 60715	A B C
Input voltage 100 ... 230 V AC $\pm$ 15 % 10 ... 32 V DC	1 2
Cable inlet 3 cable inlets, cable glands not supplied 3 cable inlets, 3 M20 plastic cable glands supplied	1 2
Number of measurement points Single point system (includes one transducer input, one mA output, and one external temperature sensor input)	1
Communications and I/O HART, 2 discrete inputs, 3 relays	D
Approvals General purpose CE, FM, CSA _{US/C} , UL, C-TICK Hazardous locations CSA Class I, II, III, Div. 2 (Groups A,B,C,D,F,G)	A C


Selection and Ordering data	Order No.
Further designs Please add "-Z" to Order No. and specify Order code(s). Manufacturer's test certificate M to DIN 55350, Part 18 and to ISO 9000 Stainless steel tag [69 x 50 mm (2.71 x 1.97 inch)]: Measuring-point number/identification (max. 27 characters) specify in plain text Namur NE43 failsafe setting - device preset to failsafe < 3.6 mA	C11 Y15 N07
Operating Instructions English French Spanish German Italian Note: The operating instructions should be ordered as a separate line item on the order.	7ML1998-5MV01 7ML1998-5MV11 7ML1998-5MV21 7ML1998-5MV31 7ML1998-5MV51
Communications Manual English French Spanish German Italian Note: The communications manual should be ordered as a separate line item on the order.	7ML1998-5NE01 7ML1998-5NE11 7ML1998-5NE21 7ML1998-5NE31 7ML1998-5NE51
Accessories Tag, stainless steel, 12 x 45 mm (0.47 x 1.77 inch), one text line, suitable for enclosure TS-3 Temperature Sensor - see TS-3 in catalog Panel mount cable extension, 2.5 m (8.2 ft) Qty 3 cable glands and retaining nuts USB cable, 2 m (6.56 ft) - Standard USB-A to USB-mini B HART modem/RS-232 (for use with a PC and SIMATIC PDM) Hart modem/USB (for use with a PC and SIMATIC PDM) Sunshield, 304 stainless steel	7ML1930-1AC 7ML1813 7ML1930-1GF 7ML1930-1GB 7ML1930-1GD 7MF4997-1DA 7MF4997-1DB 7ML1930-1GE
Spare parts Panel mount retrofit kit (convert standard unit with display to panel mount version) Terminal block replacement kit (5 piece kit with one of each removable terminal) Wall/Pipe mount plate Enclosure (include blank label) Lid (with Display) No display (blank lid provided) Fuse - AC (0.25 A, 250 V, Slow Blow) Fuse - DC (1.6 A, 125 V, Slow Blow) Battery BR2032 Panel mount gasket and fastener kit DIN-rail clip	7ML1830-1PA 7ML1830-1PB 7ML1830-1PC 7ML1830-1PD 7ML1830-1PE 7ML1830-1PF 7ML1830-1PG 7ML1830-1PH 7ML1830-1PJ 7ML1830-1PK 7ML1830-1PL

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

Dimensional drawings

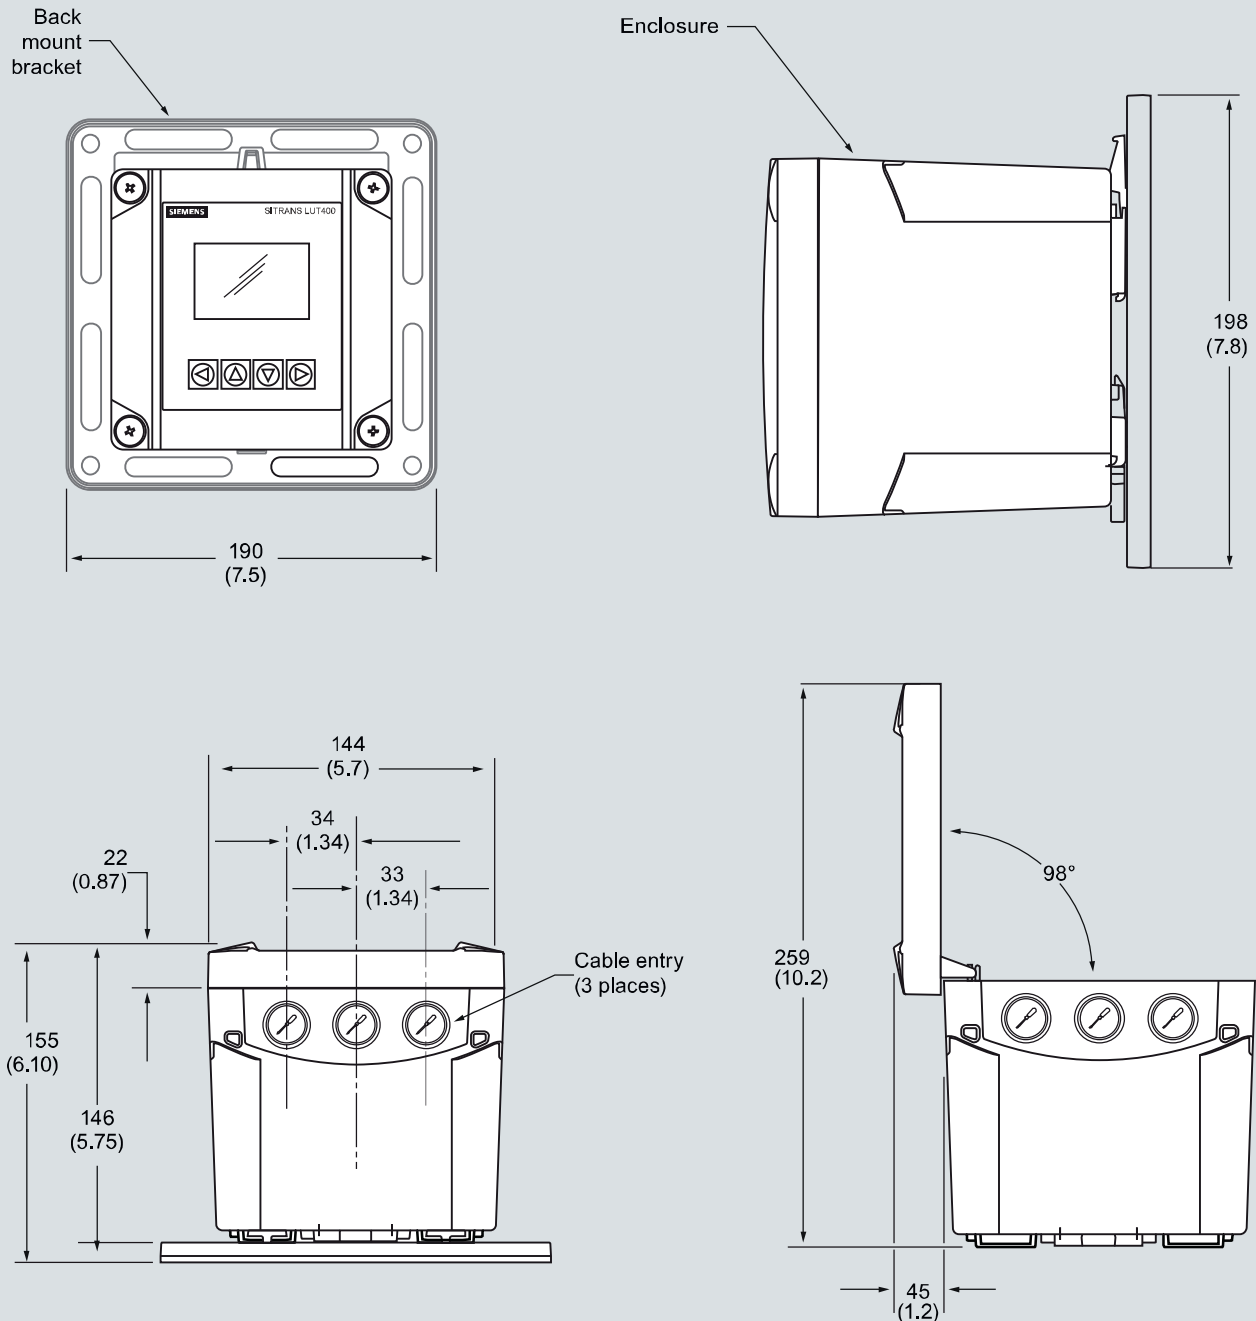



SITRANS LUT400, dimensions in mm (inch)

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

4

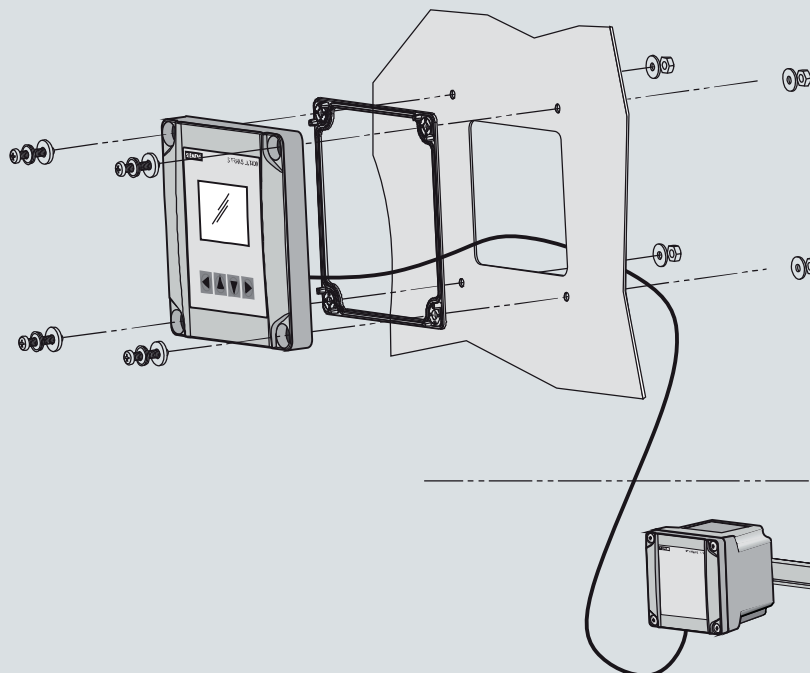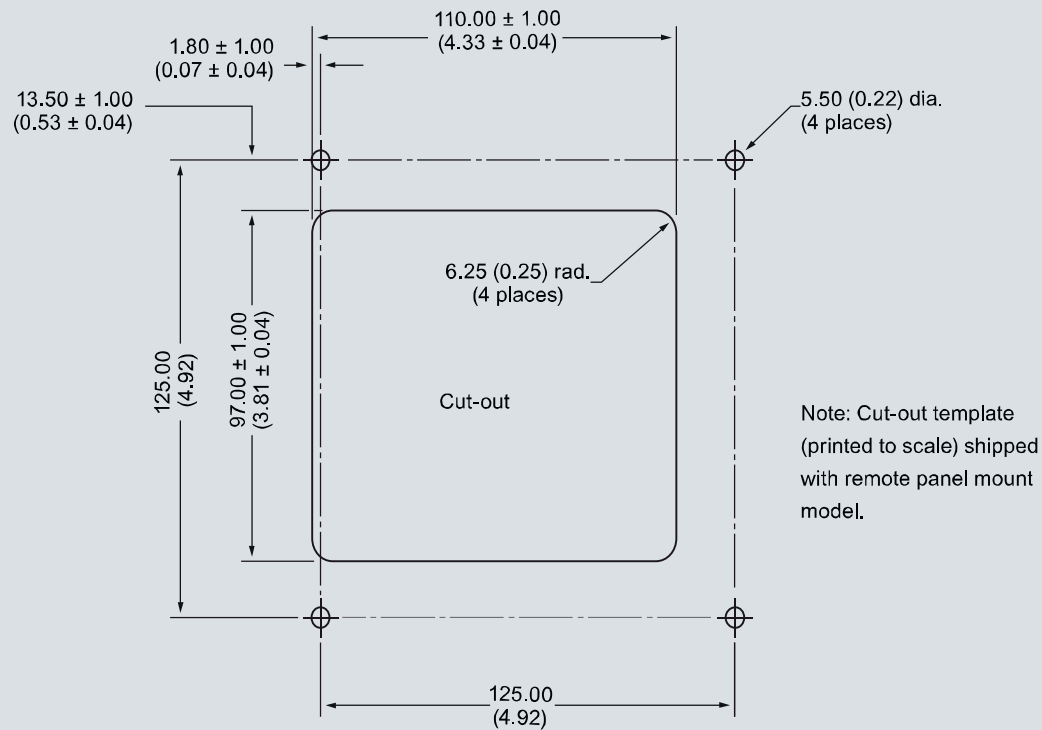


SITRANS LUT400, dimensions in mm (inch)

Level measurement

Continuous level measurement – Ultrasonic controllers

SITRANS LUT400 series

Schematics

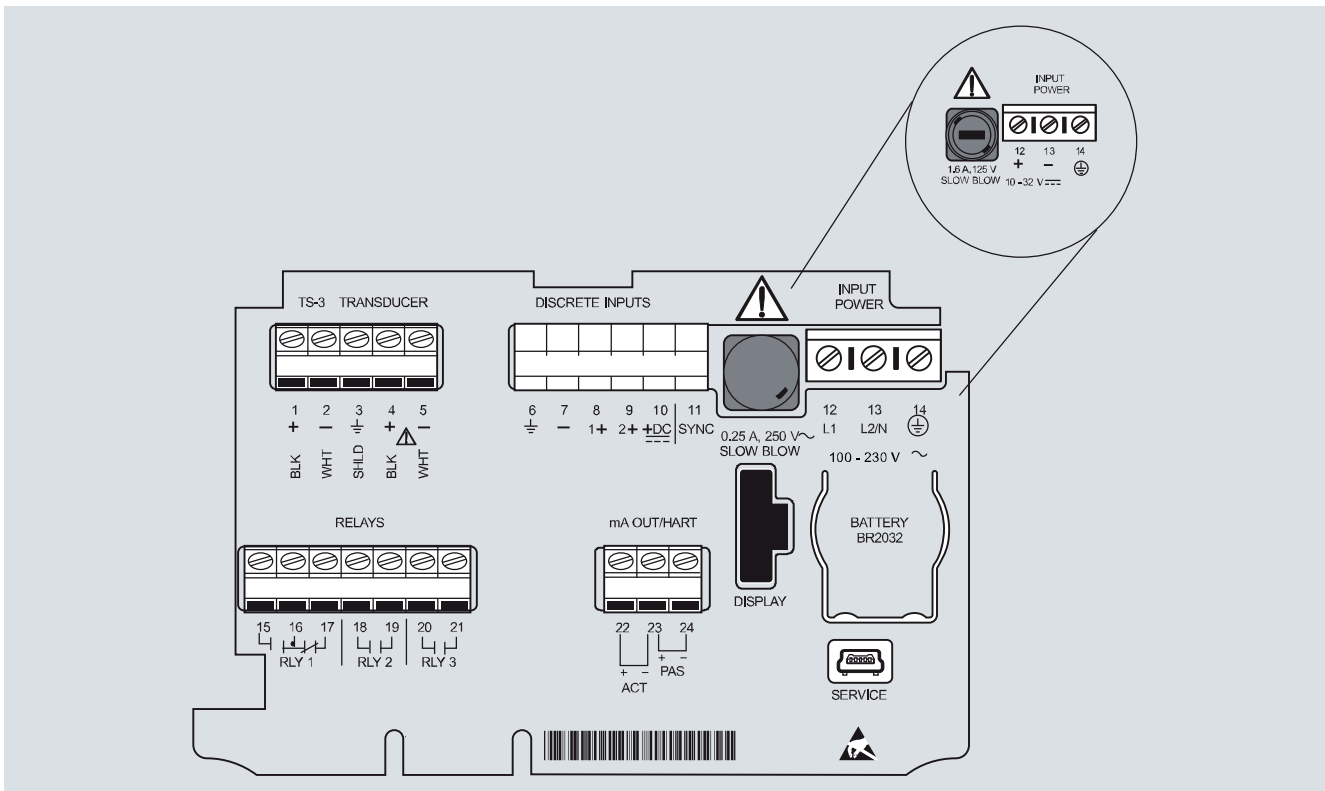

SITRANS LUT400 connections